


Ruggedized RJ45 Data Connector

Assembly Instructions

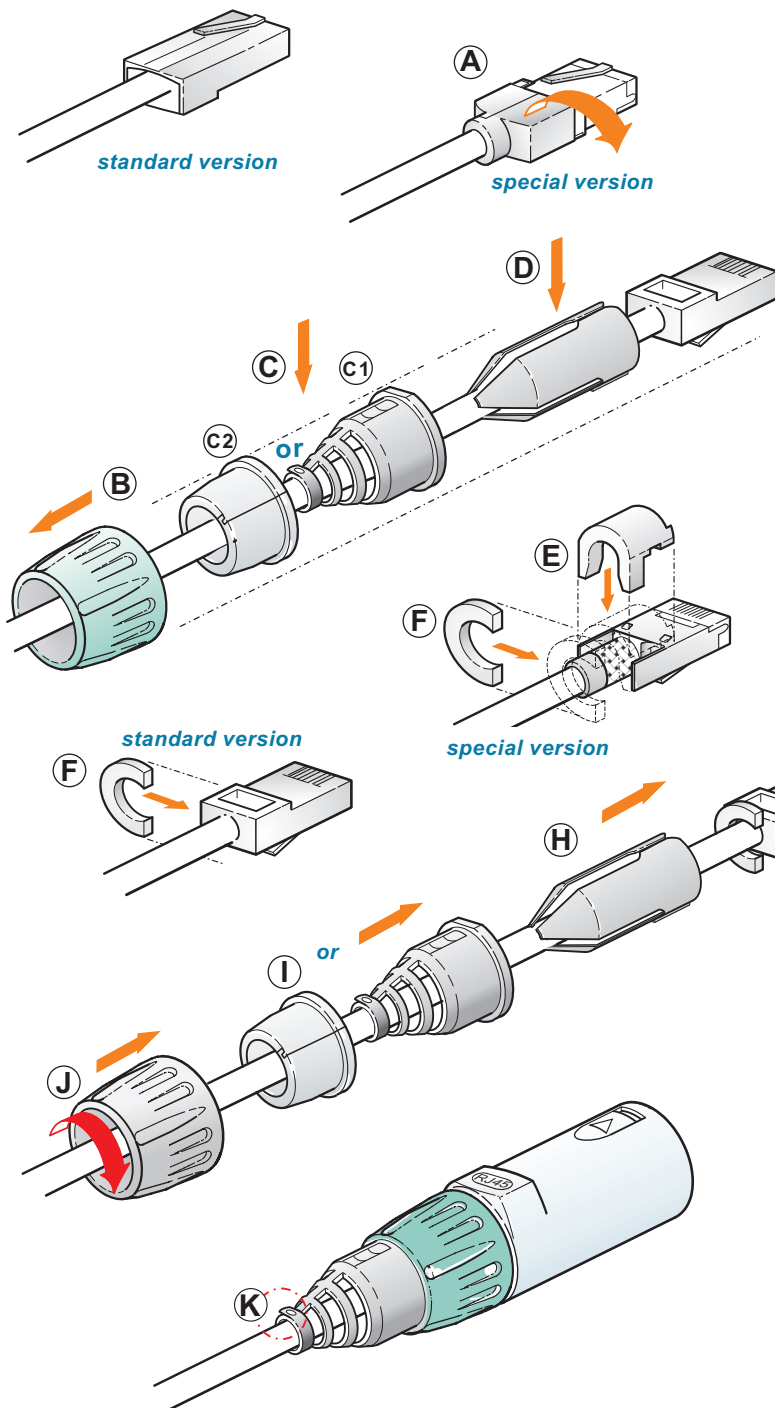

- (A)** Remove the cover if present.
- (B)** Slide the bushing over the connector onto the cable.
- (C)** Put the opened boot on the cable.
 - C1 for cable O.D. up to 5 mm (0.2")
 - C2 for cable O.D. up to 8 mm (0.3")
- (D)** Put chuck onto the cable.
- (E)** Press the adapter into the port.
- (F)** Position the ring on the cable end (flush to the face).
- (G)** Slide the connector into the housing.
 pay attention: the connector latch has to point downwards (opposite direction of RJ-45 lettering)
- (H)** Slide the chuck in the housing (pay attention to the guiding key).
- (I + J)** Slide the bushing and boot to the housing and tighten the bushing.
- (K)** Close the seal of the boot.

NEUTRIK AG
Liechtenstein

Tel.: +423/237 24 24
Fax: +423/232 53 93
www.neutrik.com

Draft Nr.: BDA 100 / 3102M0861
Date: 19.09.2002

NEUTRIK Zürich AG
Switzerland

Tel.: +41 1/736 5010
Fax: +41 1/736 5011

NEUTRIK (UK) Ltd.
Great Britain

Tel.: +44 19 83/811 441
Fax: +44 19 83/811 439

NEUTRIK USA INC.
USA

Tel.: +1 732/901 9488
Fax: +1 732/901 9608

NEUTRIK Tokyo Ltd.
Japan

Tel.: +81/3/5411 25551
Fax: +81/3/5411 2827

NEUTRIK Vertriebs GmbH
Germany / Netherlands

Tel.: +49 8131/28 08-0
Fax: +49 8131/28 08-30



NEUTRIK®

CONNECTING THE WORLD